


# PROTECRSS PRE-CUT CRICKET

1/4" (2%) Cricket Series


ModulR TS Insulation Technology



Membrane-ready  
No overlay boards required

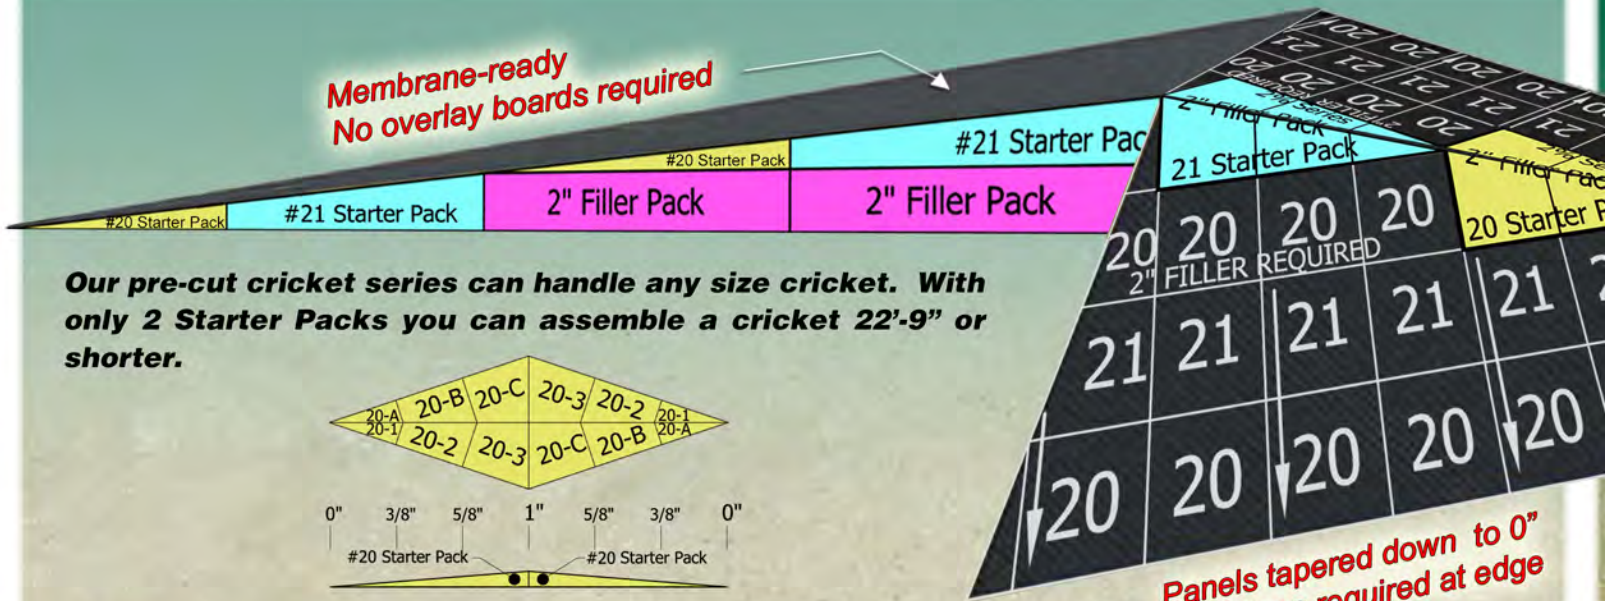


Our pre-cut cricket series can handle any size cricket. With only 2 Starter Packs you can assemble a cricket 22'-9" or shorter.

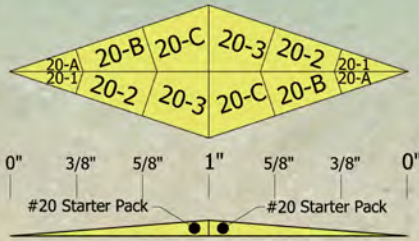

Panels tapered down to 0"  
No on-site modifications required at edge

With as little as 5 different types of product Packs or Panels, you can assemble crickets of 100' or greater.

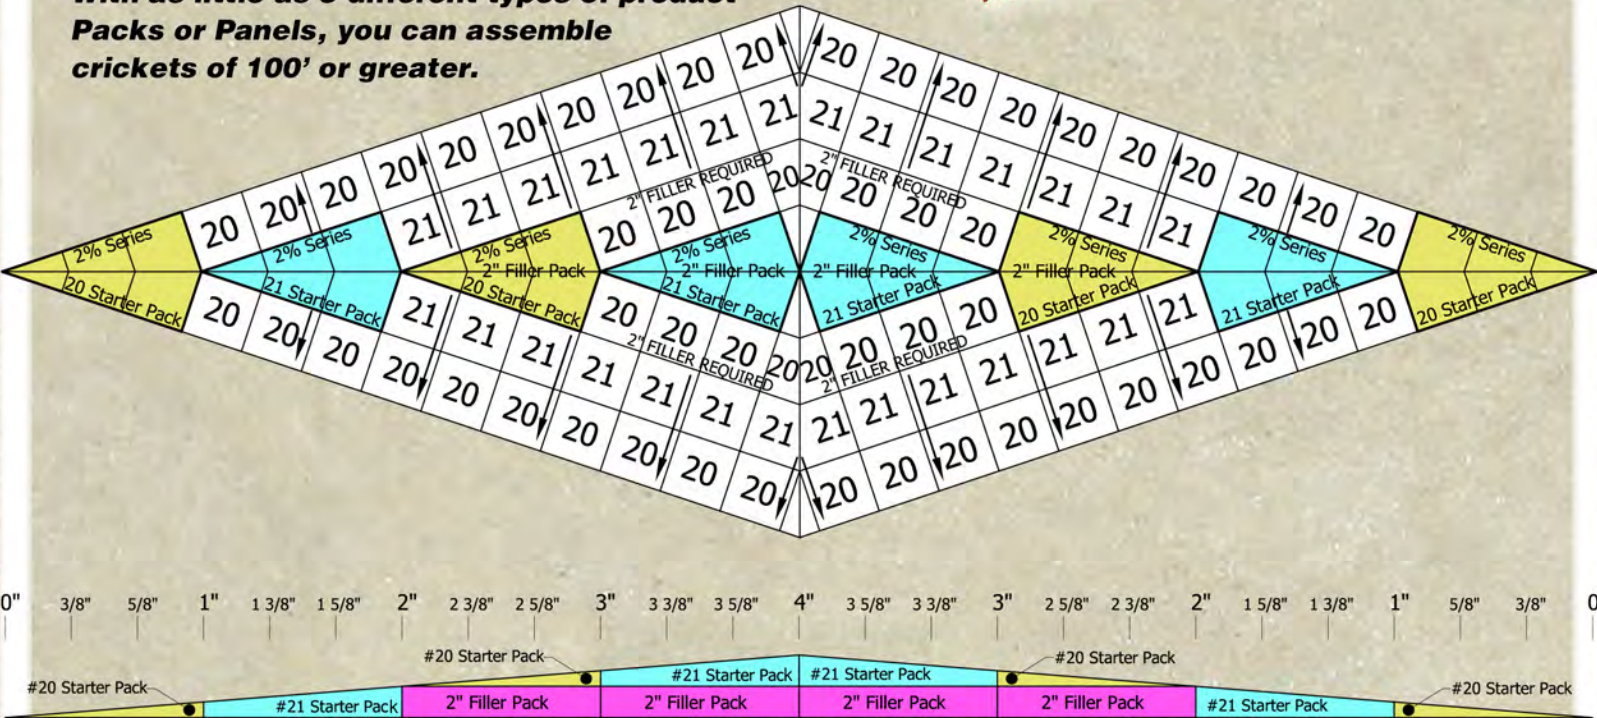

## ModulR TS INC

Developing roofing solutions with everyone in mind

1-800-908-9899 / [www.modulrts.com](http://www.modulrts.com) / [contact.us@modulrts.com](mailto:contact.us@modulrts.com)

• **Fire resistant** • **Inorganic**

• **Dimensionally stable** • **Sustainable**

**ModulR is pleased to bring you our full line of pre-cut crickets, engineered for ease and speed of installation of diamond shaped crickets (3:1 length to width ratio). Each #20 Starter Pack contains 6 pre-cut tapered (0" to 1") stone wool panels. Each #21 Starter Pack contains 6 pre-cut tapered (1" to 2") stone wool panels. The 2" Starter Pack Filler contains 5 pre-cut 2" stone wool panels.**


**To achieve optimal performance, it is recommended to install a cricket slope double that of the structural slope. I.e.: a ProtecRSS pre-cut ¼" (2%) cricket series is suggested for a structural slope of ½" (1%).**

***ModulR TS Pre-Cut 1/4" (2%) Cricket Series quantity chart***


* Length	Pre-cut 0" to 1" #20 Starter Pack	Pre-cut 1" to 2" #21 Starter Pack	4' x 4' #20 Panel 0" to 1"	4' x 4' #21 Panel 1" to 2"	Pre-cut 2" Stone Wool Starter Pack Filler	4' x 4' 2" Stone Wool Filler
Up to 22'-9"	2					
Up to 25'-4"	2		4			
Up to 45'-6"	2	2	12			
Up to 48'-1"	2	2	16			
Up to 50'-7"	2	2	16	4		
Up to 68'-4"	4	2	24	12	2	
Up to 70'-10"	4	2	28	12	2	
Up to 73'-4"	4	2	28	16	2	
Up to 75'-11"	4	2	32	16	2	4
Up to 91'-1"	4	4	48	24	4	12
Up to 93'-7"	4	4	52	24	4	12
Up to 96'-2"	4	4	52	28	4	12
Up to 98'-8"	4	4	56	28	4	16
Up to 101'-2"	4	4	60	32	4	20

\* This series can accommodate crickets greater than 101' - 2". Please contact us for details.  
Custom crickets and available on demand.


Pre-cut 0" to 1"  
#20 Starter Pack



Pre-cut 1" to 2"  
#21 Starter Pack

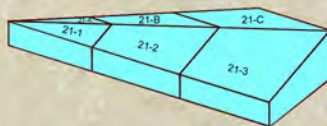

Pre-cut  
2" Stone Wool  
Starter Pack Filler

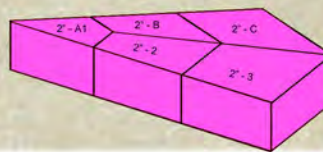

**ModulR TS INC**

Developing roofing solutions with everyone in mind


1-800-908-9899 / [www.modulrts.com](http://www.modulrts.com) / [contact.us@modulrts.com](mailto:contact.us@modulrts.com)

# PROTECRSS PRE-CUT CRICKET

1/4" (2%) Cricket Series

## 5 Easy Steps

Pre-cut Cricket Installation Instructions

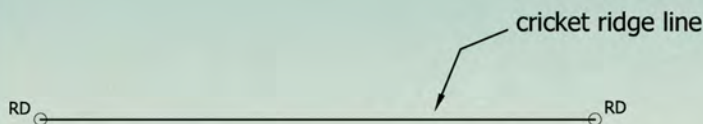


### Step 1: Cricket Ridge Line

Establish the Cricket Ridge Line by snapping a chalk line between both drains.

### Step 2: Cricket Mid-point Line

Establish the mid-point of Ridge Line. Snap a chalk line perpendicular to Cricket Ridge Line. Cricket Mid-point Line should be divided at equal distance on either side of Ridge Line.

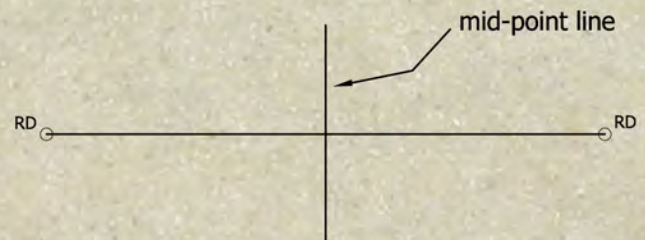

### Step 3:



**A** – Lay down first #20 Starter Pack starting at drain and centered on ridge line.

**B** – Immediately following #20 Starter Pack, lay down #21 Starter Pack centered on ridge line.

**C** – Along outside edge of #21 Starter Pack, lay down #20 tapered panels.

Please note, with smaller crickets, if mid point line is reached in step 3, trim excess at mid point line and proceed to other half of cricket. For all other larger crickets proceed to step 4.

# ModulRTS<sup>INC</sup>

Developing roofing solutions with everyone in mind

1-800-908-9899 / [www.modulrts.com](http://www.modulrts.com) / [contact.us@modulrts.com](mailto:contact.us@modulrts.com)

# PROTECRSS PRE-CUT CRICKET

1/4" (2%) Cricket Series



## 5 Easy Steps

Pre-cut Cricket Installation Instructions

### Step 4:

**A** – Following #21 Starter Pack, continue with 2" Starter Pack Filler along ridge line up to Mid-point Line and trim excess.

**B** – Along outside edge of 2" Starter Pack Filler, lay down 2" Fillers (4' x 4') up to Mid-point and trim excess along line.

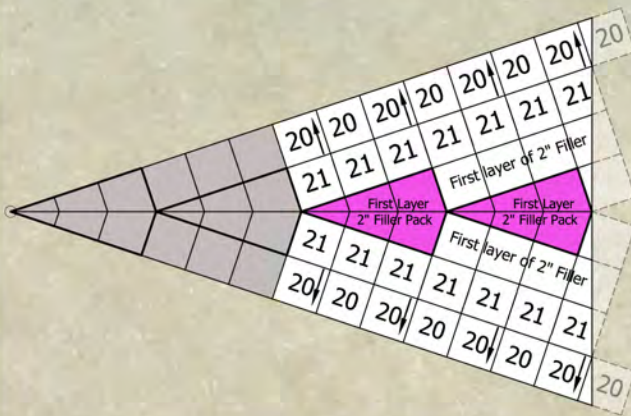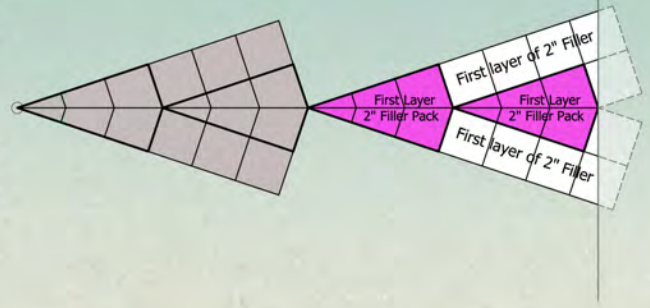


**C** – Following 2" Starter Pack Filler and 2" Filler (4' x 4'), lay down #21 Tapered Panels followed by #20 Tapered Panels and trim excess along Mid-point Line.

### Step 5:

**A** – Lay down #20 Starter Pack and #21 Starter Pack over 2" Starter Pack Filler from previous step up to Mid-point line and trim excess.

**B** – Over 2" Filler (4' x 4') from previous step, lay down #20 Tapered Panel and #21 Tapered Panel up to Mid-point Line and trim excess.

**C** – Repeat steps 3 – 5 for other half of cricket.

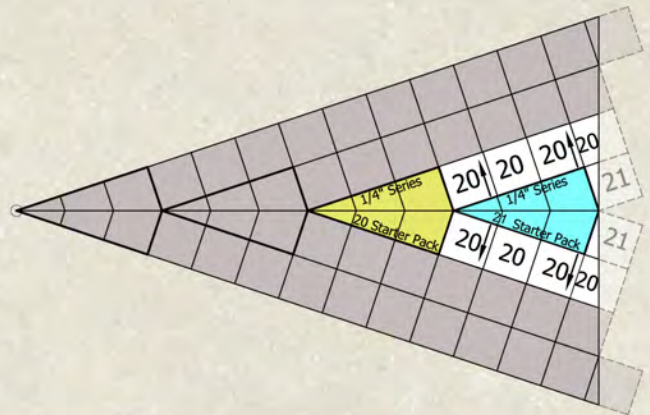

# ModulRTS<sup>INC</sup>

Developing roofing solutions with everyone in mind

1-800-908-9899 / [www.modulrts.com](http://www.modulrts.com) / [contact.us@modulrts.com](mailto:contact.us@modulrts.com)